

# QUEST

leisure products



## Rocket Toasters

• Full item instructions and extended details •

# Thank you

for purchasing this product. At Quest we take every care to ensure that the product fulfils your expectations. We hope you enjoy using this product

## General Use



**This product is not a toy and should never be used by children. Please ensure children are supervised at all times. Never leave the kettle to boil unattended as it could boil dry, which could lead to damage or fire.**

- Please keep these instructions, the sales receipt and, if possible, the carton with the inner packaging.
- Please read the instruction manual carefully before using the device.
- Take the product out the box. Remove the stickers, protective foil or plastic from the device.
- This product is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by a person that is responsible for their safety.
- By ignoring the safety instructions the manufacturer can not be hold responsible for any damage or injury caused by the product. To protect children against the dangers of electrical appliances, please make sure that you never leave the product unattended. Therefore you have to select a storage place for the product where children are not able to grab it and ensure the cable is not hanging in a downward position.
- The product must be placed on a stable, level surface.
- Do not touch hot surfaces. Use the handle at all times.
- The user must not leave the product unattended while it is connected to the power supply.
- Keeping this kettle clean and de-scaled will increase its life span and avoid unnecessary wear.
- Make sure that the product is stored in a dry environment.
- Check if the voltage of the product corresponds to the main voltage of your supply.
- This product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the product is safe to use based on scientific evidence available today.
- Never move the product by pulling the cord and make sure the cord can not become entangled and do not wind it around the product.
- Allow the product to cool down before you clean or store it.
- To protect yourself against an electric shock, do not immerse the cord plug or product in the water or any other liquid.
- Do not use this product with a damaged cord or plug or when the product has malfunctions, or has been damaged in any manner.
- Do not use outdoors or any purpose other than its intended use.



### Quest manual download site

The quest manual download site can be found at the url below or the QR code to the left

<http://www.questleisure.com/manuals>.



# General Use

General usage and details about your product

## General Use

- All repairs including to the plug or cord should be made by a competent qualified repair service. Do not repair this product yourself.
- Note: To avoid danger by accidental resetting the thermal protection, this product may not be powered through an external switching device, such as a timer, or connected to a circuit that regularly will be switched on or off.
- Allow the device to cool down before you are going to remove or replace spare parts.
- Do not use this product near direct heat sources.
- Make sure the cord does not touch the hot parts of the product.
- Do not use this product in the bathroom or near a sink filled with water. If this product has fallen into the water do not under no circumstances directly grab this product, but first pull the plug from the socket.
- Make sure that the cord is not hanging over the edge of the table or counter, does not touch any hot surfaces or is coming directly into contact with the hot parts of the product. Do not place the product underneath or close to curtains, window coverings etc.
- Children shall not play with the product.
- Cleaning and user maintenance shall not be made by children unless they are supervised.
- Keep the product and its cord out of reach of children.



# Usage

## Guidelins on using your toaster

### Before First Use

Before using the toaster for the first time please repeat the process below 2-3 times to ensure the elements are cured properly and your toaster is ready to be used.

- Set the browning level to maximum.
- Operate the appliance empty, to cure the new elements.
- This may smell a bit, but it's nothing to worry about.
- Ensure the room is well ventilated.

### Making Toast

- Sit the toaster upright on a firm, level, heat-resistant surface and plug into the power socket.
- Turn the browning control to the required setting (1 = low, 7 = high).
- Put bread into the toasting slots (maximum thickness 27mm) and press the lever down fully.
- PLEASE NOTE: It won't lock down unless the toaster is connected to the electricity supply.
- The cancel lights will glow, and the elements will heat up .
- When it's done, the toast will pop up.
- To stop toasting, press the cancel button.
- If you are using frozen bread you can use the defrost function
- Leave the browning level at your favoured setting, insert the frozen bread, lower the lever, then press the defrost button.
- The defrost light will glow, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.
- To reheat a piece of toast use the reheat button
- Leave the browning control at your favoured setting, insert the bread, lower the lever, then press the reheat button.
- The reheat light will glow, and the toast will be given a short burst of heat. Don't reheat "battered", torn, or misshapen bread.

### Bread Slices

- The type of bread, its moisture content, age, thickness and number of slices all have an effect on the degree of toasting.
- If you are going to toast two slices of bread side by side, they should be of the same type of bread, have the same moisture content and be of the same age. (Wherever possible, bread should be kept wrapped).
- The overall thickness of the bread should not exceed 1.5 cm.
- If the bread slices are very thin, they will not be centred automatically and they should be toasted on the lowest setting in order to avoid them becoming burnt on one side.

# Storage , Care and Cleaning

Details on how to look after your product.

## Storage

To help keep your product looking newer for longer and prolong the life and use of the product, we recommended that the product is always cleaned after use and stored in a clean, dry and free from damp location.

## Care and Cleaning Instructions

Care should always be taken when cleaning this product. Use of harsh cleaners could damage the product and should never be used. To clean this product we recommend this procedure:

- Unplug the toaster before cleaning.
- Allows allow the toaster to cool down before cleaning.
- Remove and empty the crumb tray.
- The crumb tray can be cleaned in warm soapy water and left to dry thouroughly before use
- Do not immerse the power cord or toaster in water. Simply wipe the outside toaster down with warm soapy water. To protect the outer surface do not use abrasive cleaners.

Part	Description	Part	Description
1	Toaster slots	5	Defrost Button
2	Outer Casing	6	Browning Control
3	On Switch	7	Cancel Button
4	Reheat Button	8	Crumb Tray





# Warranty

Details on the warranty that comes with your product.

**Warranty :** 12 Months (1 Year) warranty.

## Warranty Claim

- In the unlikely event of a warranty claim, you must contact your retailer.
- If you have not registered your product, first fill out the registration form overleaf and take this with you when you go to your retailer.
- Take the product to your retailer that you purchased it from along with your proof of purchase and explain the issue with the retailer.
- The retailer will then check the product and get in touch with the wholesaler or manufacturer.
- The retailer will keep you informed of the progress of the claim.
- The wholesaler or manufacturer will not (unless under special circumstances) get in touch with you as all information will be passed back directly to the retailer.

## Warranty Information

- This product comes with a full 12 month manufacturers defect warranty and covers any manufacturers defects for one (1) year from the date of the original purchase. It does not cover any damage occurred though:
  - The product falling, being dropped, scratched or damaged in any way.
  - The product has been technically changed by the owner or another third party
  - Improper use of the product.
  - Normal wear and tear - which includes (but is not limited to): colour fading, wearing, stretching.
- The affected part will be replaced or repaired (manufacturers option) if they are found to be defective within the one (1) year time frame.
- The warranty will be void if the product has been subject to neglect, misuse, improper installation, misapplication, alteration or accident including, but not limited to, improper installation, maintenance or use of unauthorised parts or attachments.
- Damage caused by not following the instruction manual in full will invalidate the warranty, if this results in consequential damages, Quest will not be liable for these damages or any costs incurred due to these damages.
- Quest will not be liable for material damage or personal injury caused by improper use or if the safety instructions are not properly executed in full.
- All claims must be made through the retailer you purchased the product from and not direct with the wholesaler or manufacturer.
- Warranty claims cannot be honoured without an original dated receipt and or proof of purchase.
- By executing repairs the original warranty period of one (1) year will not be extended, nor the right to a complied new warranty. This warranty is only legal on European soil.
- This warranty does not overrule the European directive 2011/83/EU.
- This product may not be amended or changed.



# Blank Page

Page left intentionally blank, why don't you make your own notes.



[www.questleisure.com](http://www.questleisure.com)



[twitter.com/questleisure](https://twitter.com/questleisure)



[facebook.com/questleisure](https://facebook.com/questleisure)



[youtube.com/questleisure](https://youtube.com/questleisure)